

# Polyfoil® Spin'n'dose™



### Mini spin. Macro dose.

The new macrodosing device has been created for the easy dispense of metered doses. Compliant to prescription, pharma grade and unique in design and usage.

### Advantages

- Flexible dose increments from 0.05 0.95 ml
- Ideal for viscous gels and creams
- The tube body will collaps while using
- Easy to grip wheel
- Standard use of tube by «pressing on tube body»
- Ready to dose: Just one primary stroke

### **Applications**

- Dermatologic Rx treatment
- Dermatologic OTC treatment



- Anti inflammatory gels
- Athlete's foot treatment
- Dental specialties (medicine)



### Put a spin on compliance

The new macrodosing device has been created for the easy dispense of metered doses. Compliant to prescription, pharma grade and unique in design and usage.

## Specification

MATERIALS DIMENSIONS

BodyPolyfoil®, PEDiameter30/35/40 mmSpin wheel and holderPPContent25 - 150 mlBallPPDosage0.05 - 0.95 ml

Sealing valve TPE
Cap material PP

DECORATION CERTIFICATIONS


Offset print Quality Pharma grade

Silk screen print

Hotfoil stamping

Varnish: glossy, satin,


matte

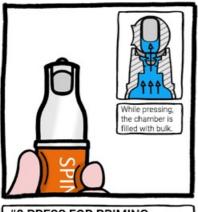

#0 PRESS FOR PRIMING
First use only



#1 SPIN THE WHEEL BY 180°

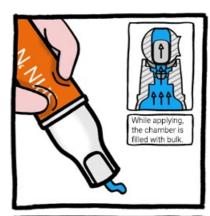

#2 PRESS & DOSE For further application, just repeat #1 and #2